


Wing (Cont)

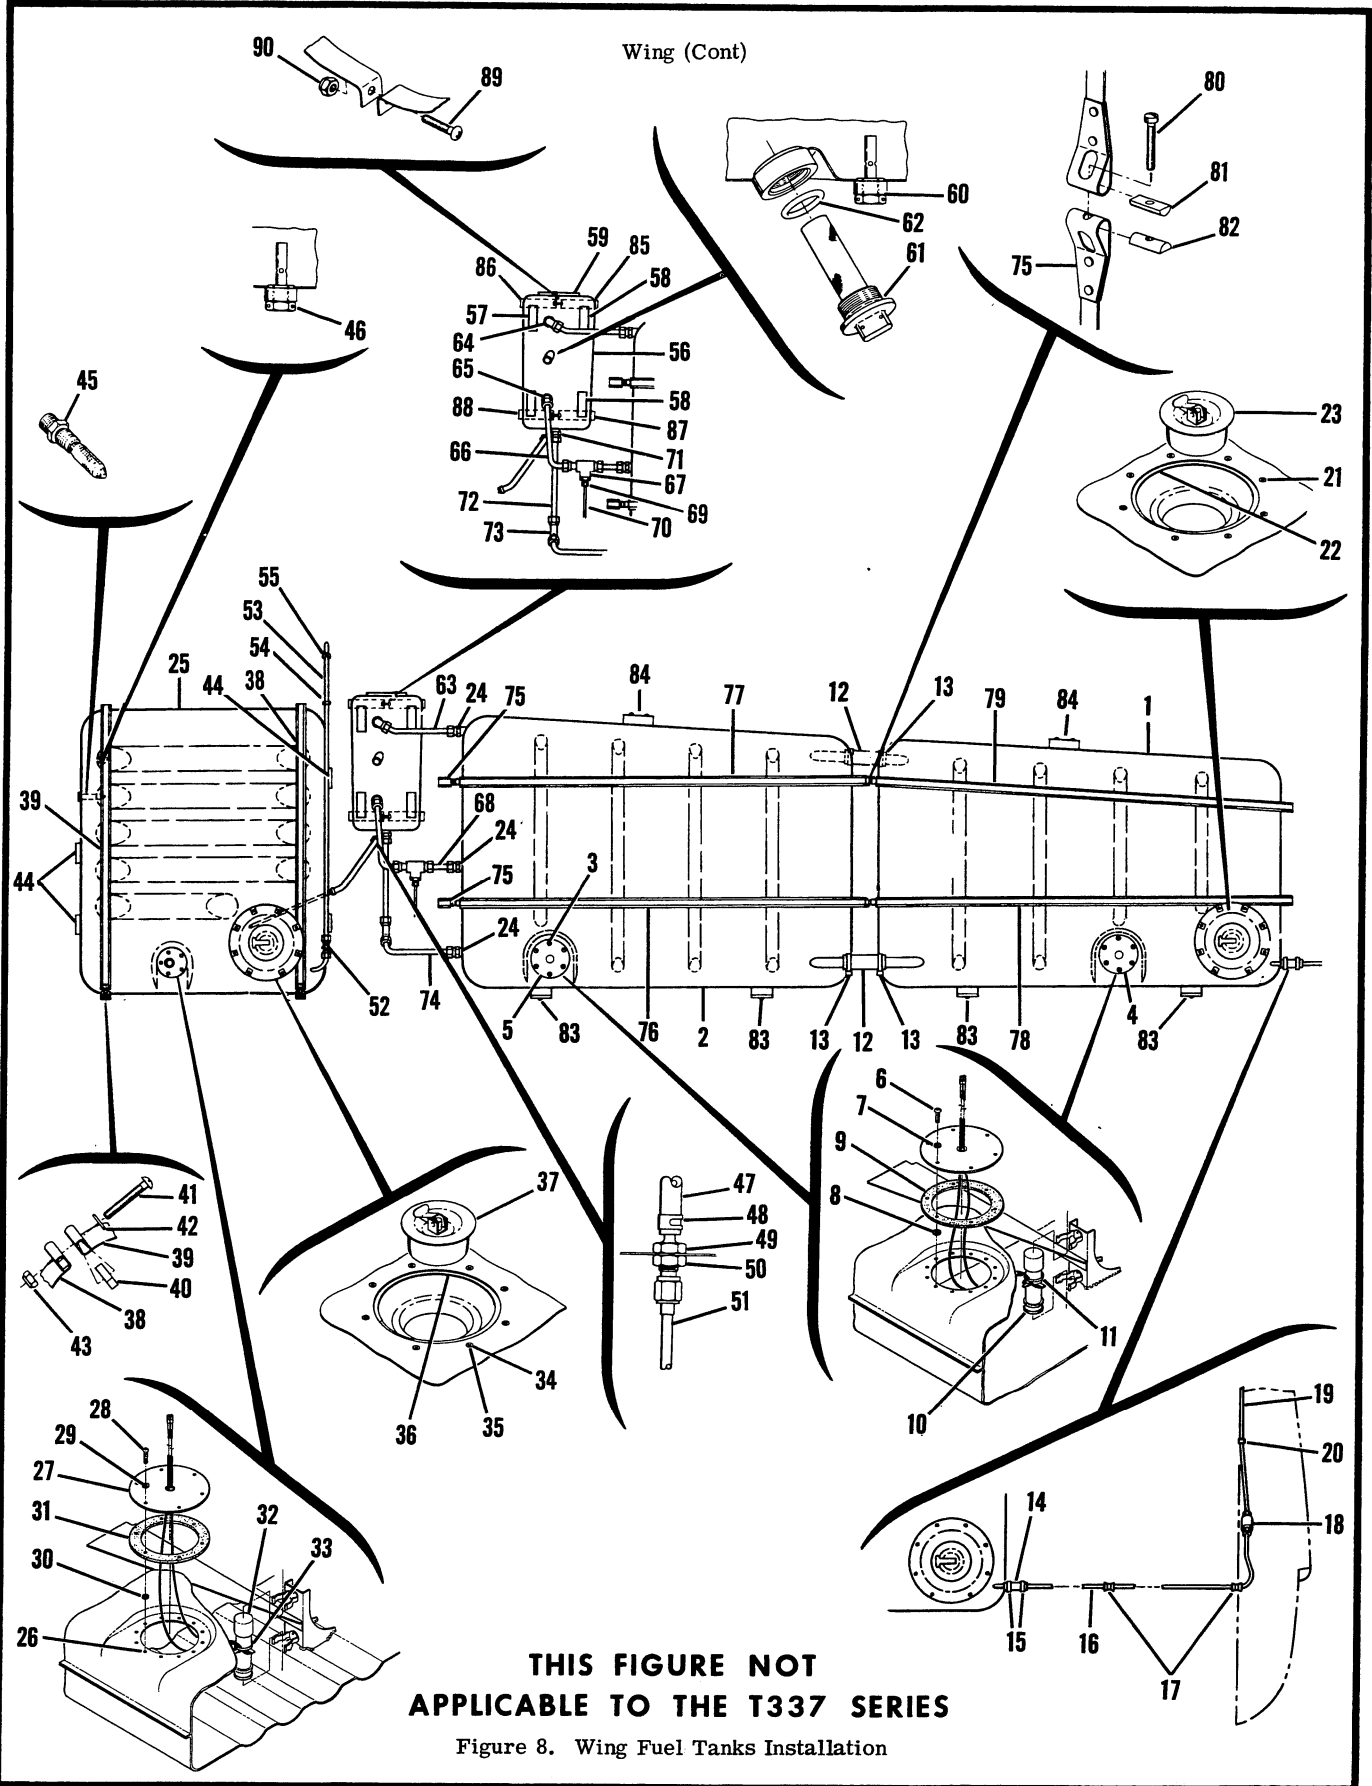

**THIS FIGURE NOT  
APPLICABLE TO THE T337 SERIES**

Figure 8. Wing Fuel Tanks Installation